


5x12 Satellite TV Multi-Switch Installation Instructions

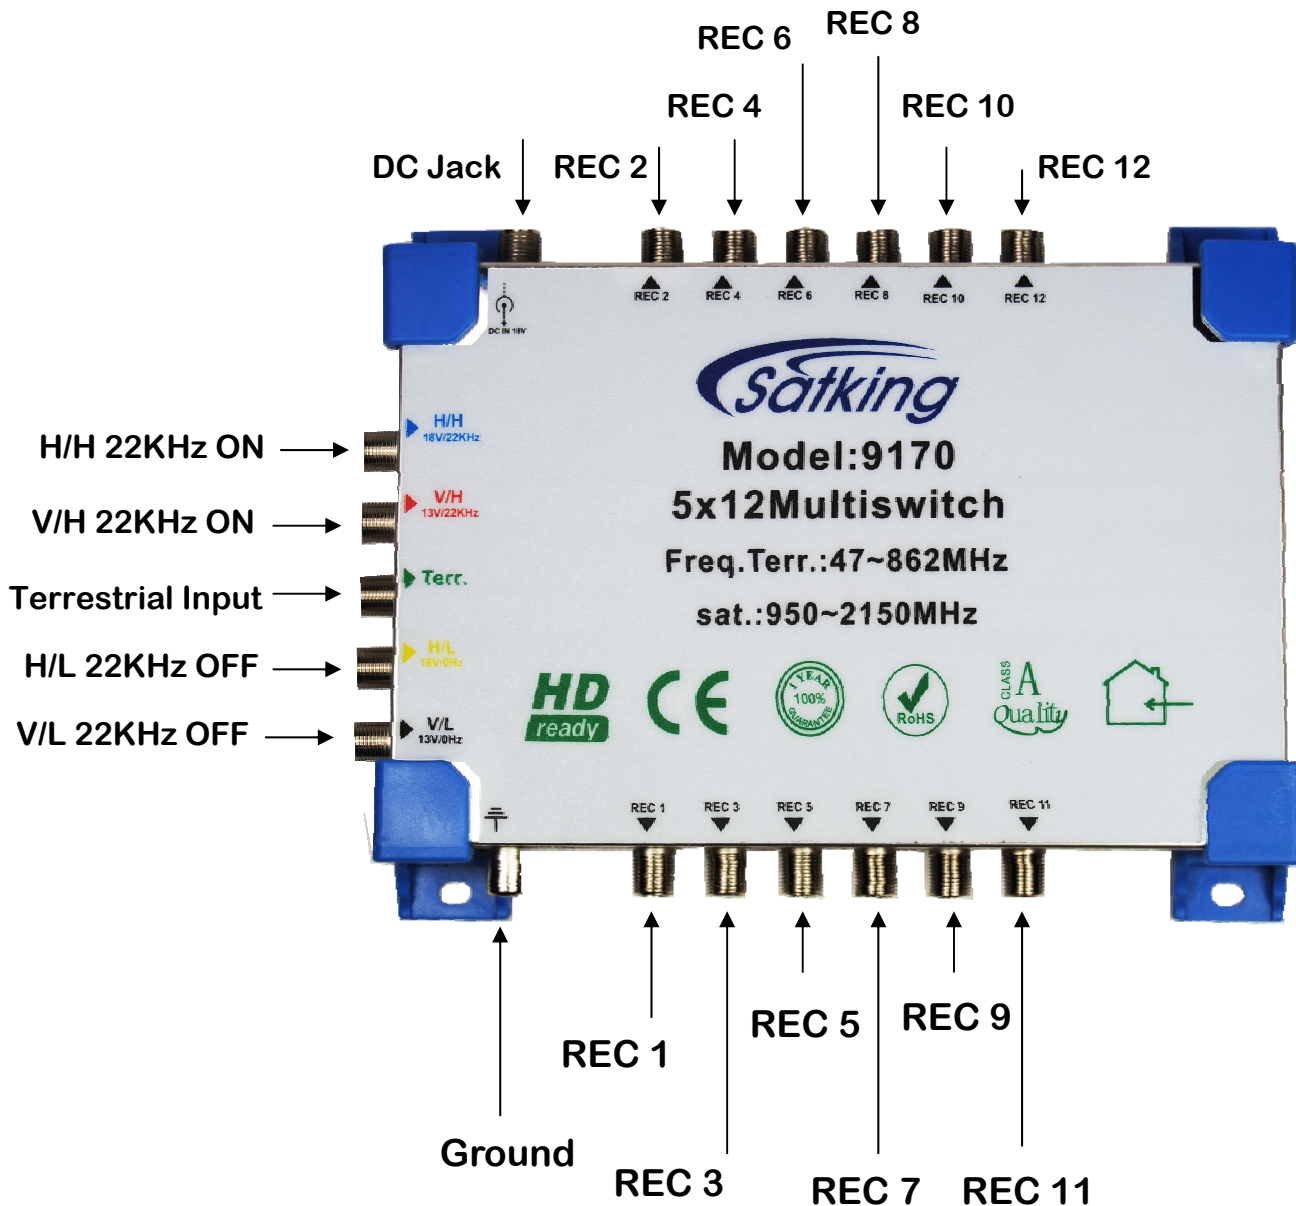

Connect a dual output LNB to LNB H/H & LNB V/H to provide both horizontal and vertical signals through out the complete installation, the 22KHz function needs to be turned on in the LNB setup for this satellite. Connect a dual output LNB to LNB H/L & LNB V/L with the 22KHz switch off in the LNB setup for this satellite. Connect the terrestrial TV antenna to the TERR port and existing TV will also mix into the system. A power injector is required for this Mutli-Switch this is included in this package.